

BOBCAT SERVICE INTERVAL

EVERY 10 HOUR SERVICE:

1. Engine air filter (See indicator instructions)
2. All Loader pivot points (Lube 10 places)
3. Cooling shroud (Back flush with air)
4. Engine oil (Check - do not overfill)
5. Variable sheaves (Lube 2 places)

EVERY 20 HOUR SERVICE:

1. Operating levers & pedals (Lube 5 places)

EVERY 40 HOUR SERVICE:

1. Engine oil & filter (Change - use MS/DG)
2. Transmission oil (Check level)
3. Check drive chains

EVERY 60 HOUR SERVICE:

1. Hydraulic oil filter (Change first 50 hr. only)

EVERY 100 HOUR SERVICE:

1. Check steering clutches
2. Crankcase breather (Inspect - Service)

EVERY 200 HOUR SERVICE:

1. Valve tappets (Check - Adjust as needed)
2. Plugs and points (Check - Clean - Gap)

For further information see Owner's Manual